

Micro-Current Garments
Instructions for Operation

Micro-current Garments are used with and require a [BCX Ultra](#) an Ultra MCC4 Microcurrent Interface, and Ultra Micro-current cords.

1. Plug MCC4 Interface into the BCX Ultra Electrode Jacks
2. Plug Micro-current cords into Micro-current Garments
3. Connect the other ends of the cords into the MCC4 Interface jacks
4. Select Electrodes, or Electrodes with another BCX Ultra Accessory
5. Run a BCX Ultra program

(For frequencies between 100KHz and 4MHz, select "Squarewave" type)

Up to 2 sets of Garments can be used in 1 MCC4's at a time

Up to 4 sets of Garments can be used in 2 MCC4's at a time