

## Instructions for Operation

The BEP-ST system consists of a BEP-ST Control Unit and an Ultra BEP Mat or BEP Concentrator.

1. Plug the cord from the Ultra BEP Mat or Concentrator into the rear of the Control Unit. Plug the Control unit into an AC wall outlet with the supplied power cord.
2. Press "On/Off" momentarily to Power On
3. Press "Up" or "Down" and "Next" to change the Waveform
4. Press "Up" or "Down" and "Next" to change the Program
5. Press "Up" or "Down" and "Next" to select the Run Hours
6. Press "Up" or "Down" and "Next" to select the Power Level
7. Program starts, displaying the Frequency
8. Press "Up" or "Down" to change Power Level while running
9. Frequencies sequence automatically
10. Press "Next" to Manually advance frequencies
11. Auto Shutoff at the end of the program
12. Press "On/Off" momentarily to manually shut off

[Click Here for BEP Stand Alone Programs and Frequencies](#)

## Instructions for Operation

The BEP-Ultra system consists of a BEP-Ultra Control Unit, an Ultra BEP Mat or Ultra BEP Concentrator, and a BCX Ultra Deluxe

1. Plug the cord from the Ultra BEP Mat or the Ultra BEP Concentrator into the rear of the Control Unit
2. Plug the supplied cord from rear of the BCX Ultra into the rear of the BEP-Ultra Control unit
3. Power on the BCX Ultra and select a program
4. Select BEP, or BEP with another BCX Ultra Accessory
5. Run a BCX Ultra Program
6. Press "Pause" to Pause or Continue
7. Auto-shut-off at the end of the program, if selected