

# INSTRUCTIONS FOR OPERATION

Micro-Current Facial Toning Wands are used with and require a BCX Ultra Deluxe

1. Plug one end of the cords into the black handles of the micro-current Facial Toning Wands
2. Connect the other ends of the cords into the front of the BCX Ultra Deluxe into the port that reads Electrodes Set A or Set B
3. Select Electrodes, or Electrodes with another BCX Ultra Accessory
4. Run a BCX Ultra program (For frequencies between 100KHz and 4MHz, select "Squarewave" type)

High Powered LEDs are used with and require a BCX Ultra Deluxe and an accessory cord

1. Plug the Ultra Accessory Cord into the High-Powered LED Wand
2. Connect the other end to the "Aux" jack in the back of the BCX Ultra Deluxe
3. Select Aux, or Aux with another BCX Ultra Accessory
4. Run a BCX Ultra Deluxe Program

(For frequencies between 100KHz and 4MHz, select "Squarewave" type)