

## Instructions for Operation

High Powered LEDs are used with and require a BCX Ultra Deluxe and an accessory cord.

1. Plug the Ultra accessory cord into the High-Powered LED Wand
2. Connect the other end to the "Aux" jack in the back of the BCX Ultra Deluxe.
3. Select Aux, or Aux with another BCX Ultra Accessory
4. Run a BCX Ultra Program

(For frequencies between 100KHz and 4MHz, select "Squarewave" type)